




## FLEX+ Bollard Installation Instructions

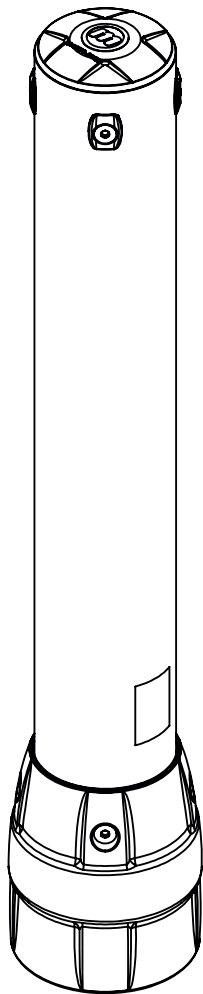


### Components

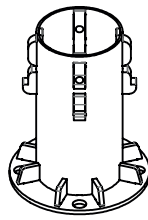


Base floor anchor

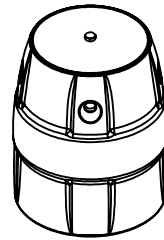


Base incl. fixing materials

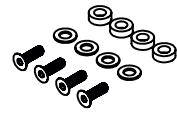


Concrete anchors

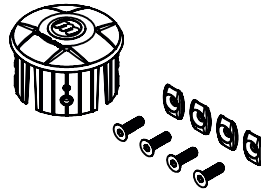

Cover cap incl. fixing materials

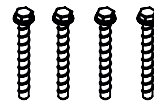


Concrete anchors

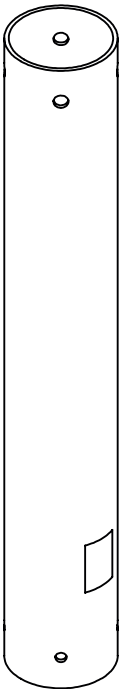

Post


### Required Tools

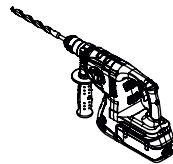

Hammer drill with  
Ø12mm [1/2in] Masonry Bit




Impact driver

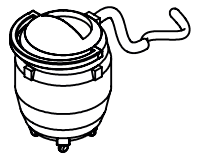

Vacuum



Marker

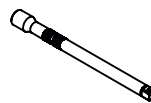

Extender








Hex Socket  
17mm [3/4in]






Hex Bit  
8mm [5/16in]


# Step 1

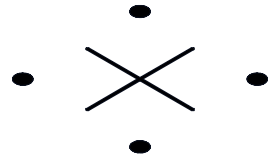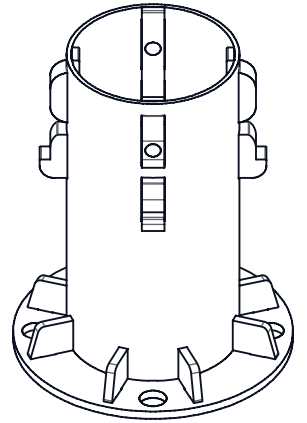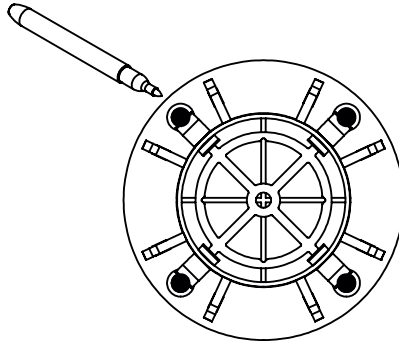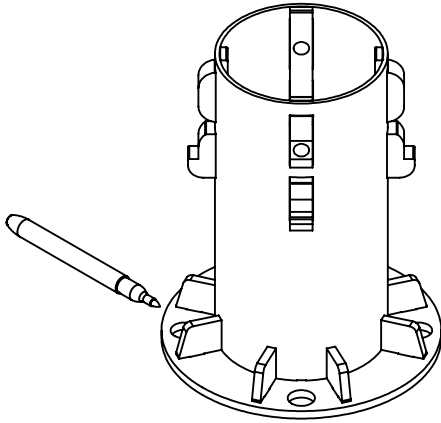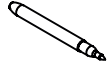





# Step 2

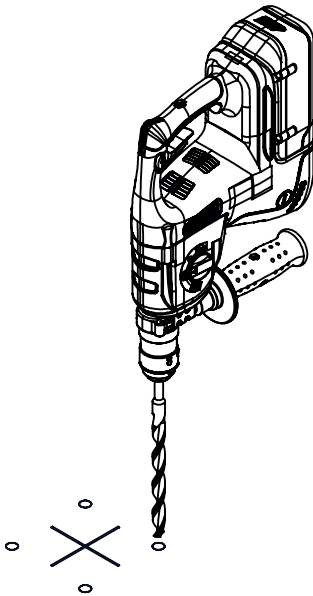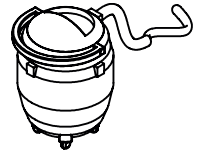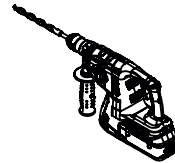

Anchor detail




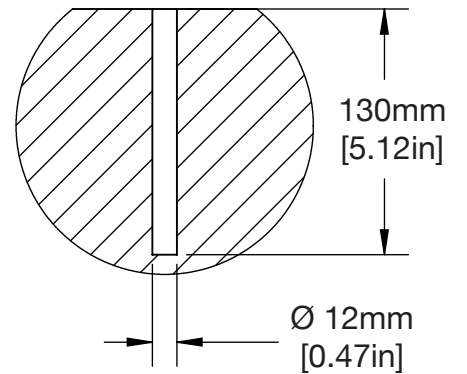


### Step 3

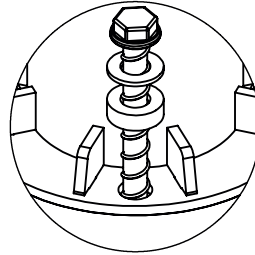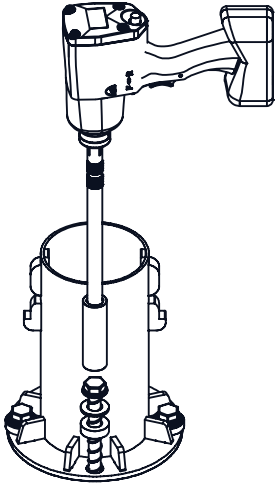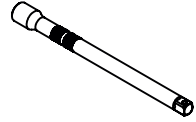
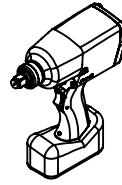


Anchor detail



### Step 4

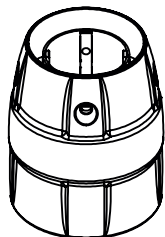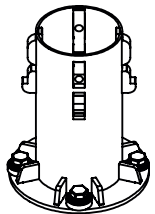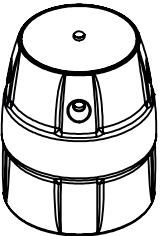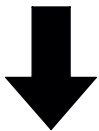



### Step 5

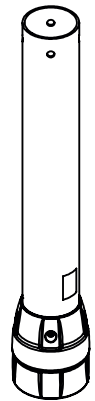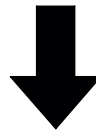



## Step 6

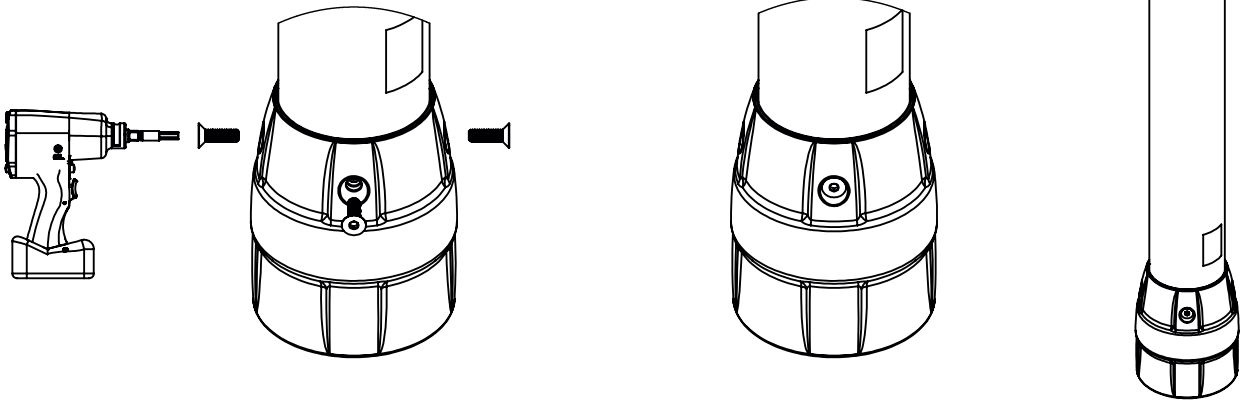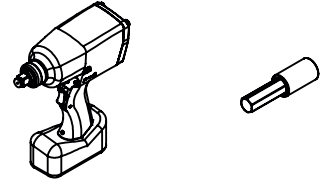

## Step 7

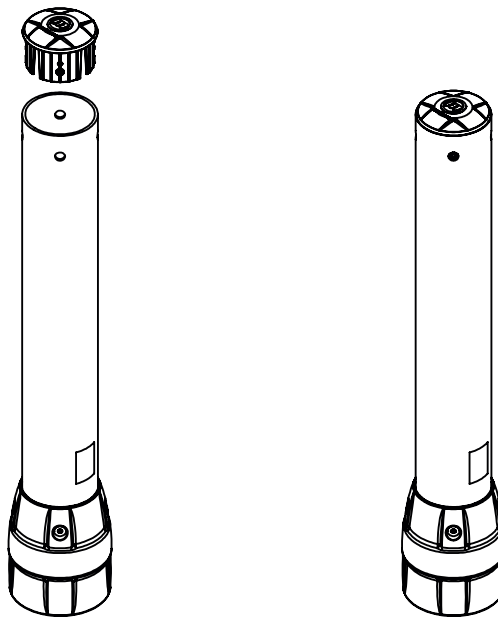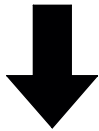

## Step 8

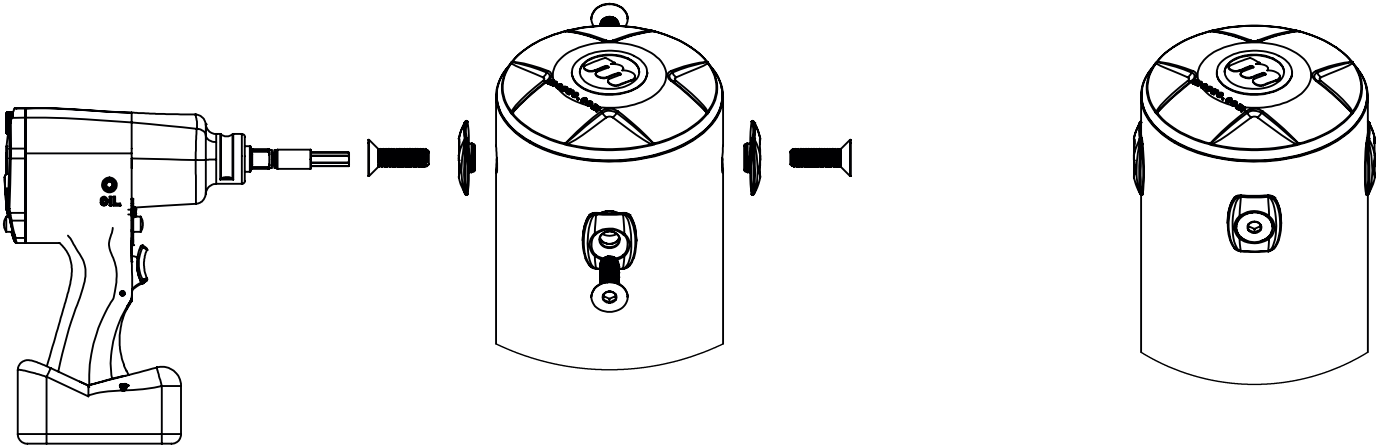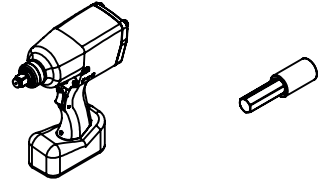

**Installation complete**

